

Instructions

Activating voice

1. Press and hold the **MENU** button and the 'Menu' LED will turn on. **MENU** ●
2. While continuing to hold the **MENU** button, press **1-A** and the 'Voice' LED will turn on. **VOICE** ●
3. Now release the **MENU** button, voice is now enabled.

To disable voice

1. Press and hold the **MENU** button and the 'Menu' LED will turn on. **MENU** ●
2. While continuing to hold the **MENU** button, press **1-A** and the 'Voice' LED will turn off. **VOICE** ●
3. Now release the **MENU** button, voice is now disabled.

Changing sensitivity

1. Press and hold the **MENU** button and the 'Menu' LED will turn on. **MENU** ●
2. While continuing to hold the **MENU** button, press and release **2-B** and the and the sensitivity will display on the **SENS** LEDs.
● **1-A** = Low sensitivity, ● **2-B** = Medium sensitivity, ● **3-TP** = High sensitivity.
3. To change the setting to Low press **1-A**, to change to Medium press **2-B**, to change to High press **TP**.
4. Release the **MENU** button, and the new setting has now been stored.

Selecting auto mode

1. Press and hold the **MENU** button and the 'Menu' LED will turn on. **MENU** ●
2. While continuing to hold the **MENU** button, press and release the **TP** button and the 'Auto' LED will turn on. **AUTO** ●
3. Now release the **MENU** button, auto function is now enabled.

Disabling auto mode



1. Press and hold the **MENU** button and the 'Menu' LED will turn on. **MENU** ●
2. While continuing to hold the **MENU** button, press and release the **TP** button and the 'Auto' LED will turn off. **AUTO** ●
3. Now release the **MENU** button, auto mode is now disabled.

Auto function operation

1. When you press button **1-A**, the firing sequence is activated.
2. First call will be **1-A**, second **2-B**, and third **TP**.
3. This sequence will repeat as long as voice is detected.

Normal operation

1. Press either **1-A**, **2-B** or **TP** to activate voice. This will stay active for 3 minutes with 3 second dead time between each call. The 3-minute timer will be reset on every call.
2. Press and release the **MENU** button at any time to deactivate operation.

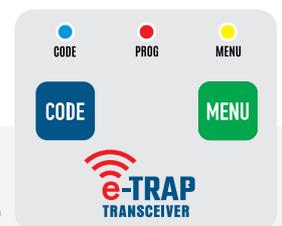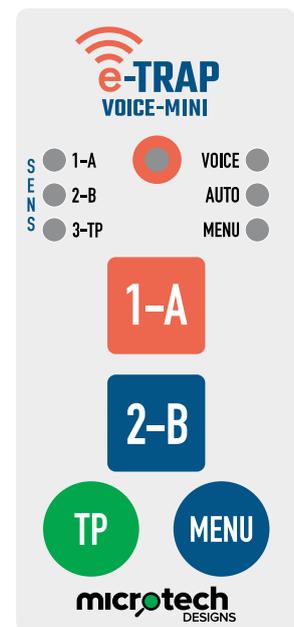

Coding remote

1. Ensure voice is disabled before coding remote. Press and hold **CODE** button on the Transceiver until blue 'Code' LED is on, then release button.
2. While the code LED is illuminated press the remote button that you want to activate the Transceiver. The code LED will flash once. ● ● ●
3. Press remote button again and 'Code' LED will flash a second time to confirm. Remote is now coded. ● ● ●
4. You can follow up with second remote, or if you press remote button for a third time, all LEDs will flash and code learn will be exited. ● ● ●

NOTE: Code learn will exit after 5 seconds if no remotes are detected.